

jura®



GIGA X8 (NAA)
Instructions for Use



For your safety: read and understand manual before use.

JURA Type 748

Your GIGA X8

IMPORTANT SAFEGUARDS	4
Control elements	8
1 Preparing and using for the first time	10
JURA on the Internet.....	10
Operation with touchscreen display and Rotary Switch.....	10
Setting up the machine.....	11
Filling the bean container.....	11
Determining the water hardness.....	11
First-time use.....	12
Connecting milk.....	14
Settings by the service technician.....	14
2 Preparation	15
Ways of preparing a beverage.....	16
Preparing specialty coffees.....	17
Preparing two specialty coffees.....	17
Preparing specialty coffees with milk.....	18
Caffè Barista and Americano.....	18
Ground coffee.....	19
Activating the grinder selection.....	20
Hot water.....	21
3 Daily operation	22
Filling the water tank.....	22
Switching on the machine.....	22
Daily maintenance.....	23
Regular maintenance.....	23
Switching off the machine.....	24
4 Permanent settings in programming mode	25
Product settings.....	26
Setting the consistency of grind.....	27
Automatic switch-off.....	28
Time and date.....	29
Timer.....	29
Setting the water hardness.....	30
Unit for amount of water / time format.....	31
Energy-saving mode.....	32
Enabling and disabling functions.....	32
Language.....	33
Display brightness.....	34
Restore factory settings.....	34
Querying information.....	35

5	Maintenance	36
	Rinsing the machine.....	36
	Automatic milk system rinsing.....	37
	Cleaning the milk system.....	37
	Dismantling and rinsing the dual spout.....	38
	Inserting/changing the filter.....	40
	Cleaning the machine.....	41
	Descaling the machine.....	42
	Cleaning the bean container.....	44
	Descaling the water tank.....	45
6	Display messages	46
7	Troubleshooting	48
8	Transport and environmentally friendly disposal	50
	Transport / Emptying the system.....	50
	Disposal.....	50
9	Technical data	51
10	Index	52
11	JURA contact details / Legal information	58

Symbol description

Symbols used

	Prompt to take action. This symbol means that you are being prompted to perform some action.
	Information and tips to make it even easier to use your GIGA.
	Display

IMPORTANT SAFEGUARDS

Comply with the instructions for use

Failure to observe the instructions for use may result in serious injuries or damage to property. Safety information is therefore indicated as follows:

	This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.
	DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.
	WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.
	CAUTION, used with the safety alert symbol, indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.
NOTICE	NOTICE is used to address practices not related to personal injury.

Follow the basic safety precautions

When using electrical appliances, basic safety precautions shall always be followed, to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock and injury to persons, do not immerse power cord, plugs, or body of machine in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.

- The use of an accessory attachment not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- To disconnect, turn any control to 'OFF' then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Use extreme caution when dispensing hot steam, hot water or hot coffee.

SAVE THESE INSTRUCTIONS. Pass them on to any subsequent user.

Intended use This machine is intended for use by specialist or trained staff in businesses, light industry and agricultural facilities or for commercial use by non-professionals. It should only be used for coffee preparation and to heat milk and water. Use for any other purpose will be deemed improper. JURA Elektroapparate AG cannot accept any responsibility for the consequences of improper use.

Special power cord set instructions

- A short power-supply cord is to be provided to reduce risks resulting from becoming entangled in or tripping over a longer cord.
- The cord shall be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.
- This appliance has a 3-pin grounded plug.
- Do not modify the plug in any way.

Extension cords are available and may be used if care is exercised in their use.

If the user chooses to use an extension cord,

- the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance, and
- if the appliance is of the grounded type, the extension cord should be a grounding type 3-wire cord, and
- the longer cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over.

IMPORTANT SAFEGUARDS

WARNING



To reduce the risk of fire or electric shock, **DO NOT** remove any service covers. **DO NOT** modify the appliance in any way that is not described in these instructions. **NO** user serviceable parts included. Repair **MUST** be done by authorized personnel only.

In the event of signs of damage, for example if there is a smell of burning, unplug the machine immediately from outlet and contact JURA customer service.

CAUTION


This appliance is for household use. Any servicing other than cleaning and user maintenance shall be performed by an authorized service representative:

- Do not immerse base in water or try to disassemble.
- Do not put the appliance or any individual parts in the dishwasher.
- Check voltage to be sure that the voltage indicated on the name plate complies with your voltage. The name plate is located on the underside of the appliance.
- Never use warm or hot water to fill the water container. Use cold water only.
- Keep your hands and the cord away from hot parts of the appliance during operation.

There is a risk of scalds or burns on the spouts and the cappuccino frother / nozzle.

- Keep children away.
- Do not touch any hot parts. Use the handles or knobs provided.
- Ensure that the cappuccino frother / nozzle is correctly fitted and clean. If incorrectly fitted or if they become blocked, the cappuccino frother or its parts might come off.

NOTICE

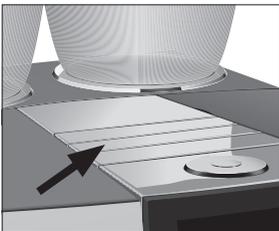

- Never clean with scouring powders or hard implements.
- Ensure that the ventilation slots are not covered.
- Never pull out the drip tray during the brewing process. Only pull the drip tray when the display instructs you or when the appliance is ready for use.

**NEVER DO
(or you will void your
warranty protection):**

- Never fill instant coffee, chocolate mix etc. into the bean container or ground coffee funnel (filler funnel for ground coffee). It will damage the functioning of the brewing chamber.
- Never fill sugar coated coffee beans into the bean container. In case of doubt, call your dealer.
- Never fill anything other than coffee beans into the bean container (no chocolate, no rice, no nuts, no spices, nothing other than roasted coffee beans).
- Never fill frozen beans into the bean container. If you store beans in the freezer, let them thaw 3 to 4 hours before filling them into the bean container.
- Never fill anything but fresh, cold and clean water into the water tank, except when decalcifying.
- Never use mineral or carbonated water. You can use tap water, bottled water, spring water and reverse osmosis water.
- Never do anything with the machine which is not described in these instructions. In case of doubt, call your dealer.

User limitations


People, including children, who

- do not have the physical, sensory or mental capabilities to use the machine safely or
- are inexperienced or lack knowledge

must be supervised by a responsible person when using it, or must be instructed in how to use it correctly.

When using the CLEARLYL Smart filter cartridge or a JURA Smart Connect, wireless connections are established. Specific details on the frequency band used and the maximum transmission power can be found in the 'Technical data' section.


Control elements

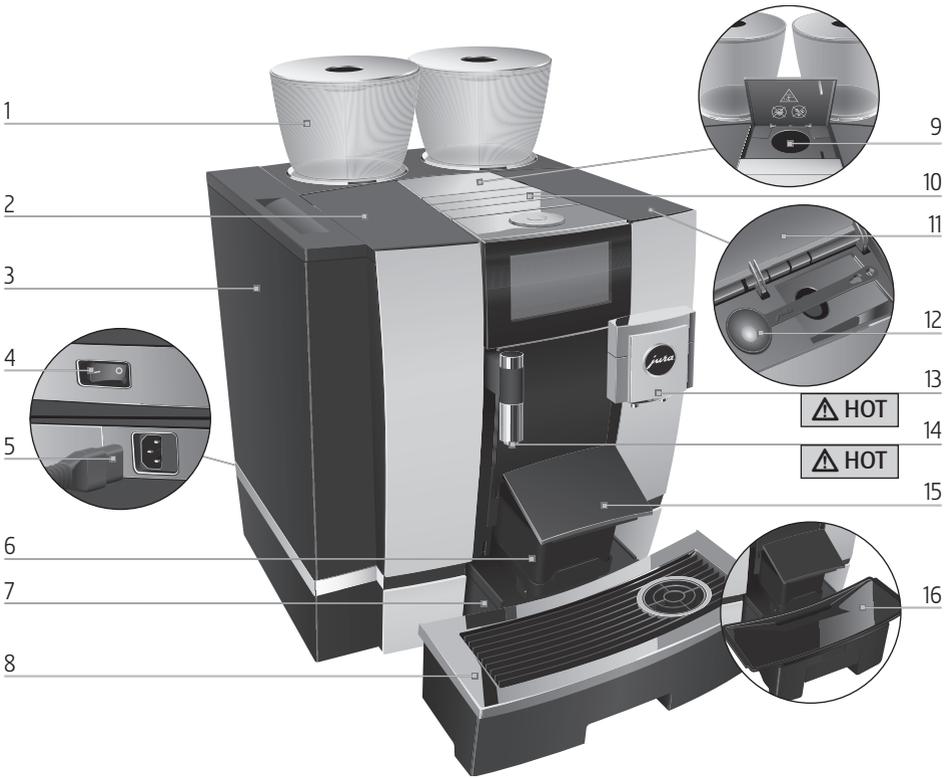

- 1 Bean container with aroma preservation cover
- 2 Water tank cover
- 3 Water tank
- 4 Power switch (back of the machine)
- 5 Plug-in power cord (back of the machine)
- 6 Coffee grounds container
- 7 Drip tray
- 8 Cup platform
- 9 Filler funnel for ground coffee
- 10 Ventilation slats (Venti Ports)
- 11 Storage compartment cover
- 12 Measuring spoon for ground coffee
- 13 Height-adjustable dual spout
- 14 Height-adjustable hot-water spout
- 15 Coffee grounds container cover (pivoting)
- 16 Insert for drip tray



- 1 Rotary Switch
- 2 On/Off button (under cover)
- 3 Touchscreen display

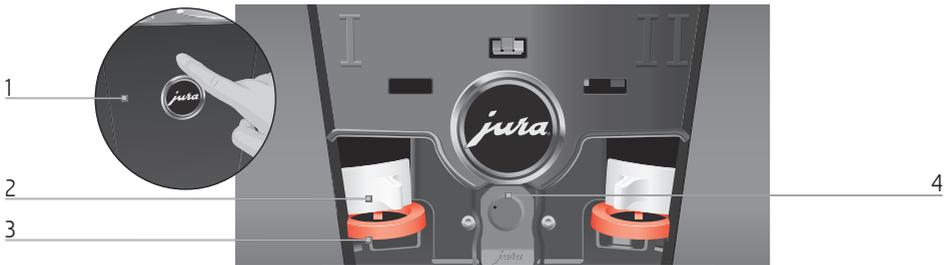


Back of the machine

- 1 Service cover
(open by pressing with your finger)
- 2 Locking device
- 3 Sliding catch
- 4 Service socket with JURA Smart Connect

Accessories

Container for milk system cleaning

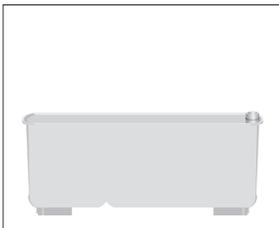

Spanner with hexagonal hole (for milk system)



1 Preparing and using for the first time

JURA on the Internet

Visit us on the Internet. On the JURA website (jura.com) you will find interesting and up-to-date information on your GIGA and on every aspect of coffee.

Operation with touchscreen display and Rotary Switch




Your GIGA features an intuitive touchscreen display. There are two ways of operating the touch display:

- **Touch**

Touch the display with your finger, for example to start coffee preparation or undertake various settings in programming mode.


- **Slide**

Move your finger across the display from left to right or from top to bottom (or vice versa). For example, you can select one of the specialty coffees in the product selector view or switch between program items in programming mode.

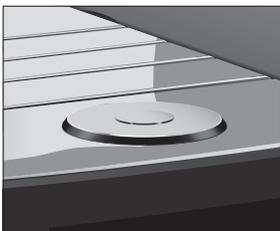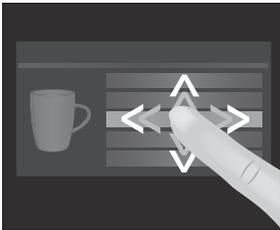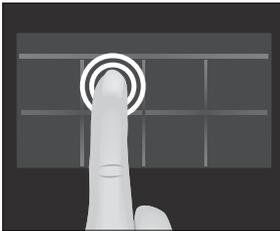

Programming with **Rotary Switch**: Also use the Rotary Switch. As soon as you turn it, the product selector view is displayed. Also navigate through the program items in programming mode and change various settings.

Setting up the machine

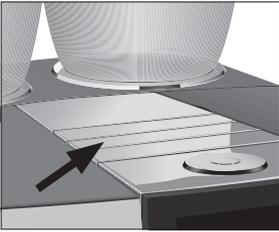

When setting up your GIGA, please note the following:

- Place the GIGA on a horizontal surface that is not sensitive to water (minimum height of 31.5 in. (80 cm)).
- Choose a spot for your GIGA which protects the machine against overheating. Ensure that the ventilation slats are not covered.

Filling the bean container

NOTICE


Coffee beans which have been treated with additives (e.g. sugar), ground coffee or freeze-dried coffee will damage the grinder.

- ▶ Only use roasted, untreated coffee beans to fill the bean container.
-
- ▶ Remove the aroma preservation cover.
 - ▶ Remove any dirt or foreign objects from inside the bean container.
 - ▶ Fill the bean container with coffee beans and close the aroma preservation cover.

Determining the water hardness

When you use the machine for the first time, you must set the water hardness. If you do not know the hardness of your water, you can find this out first. Use the Aquadur® test strips supplied with the machine.

- ▶ Hold the test strip briefly (for 1 second) under flowing water. Shake off the water.
- ▶ Wait for about 1 minute.
- ▶ You will then be able to read the degree of water hardness from the discoloration of the Aquadur® test strip and the description on the packaging.

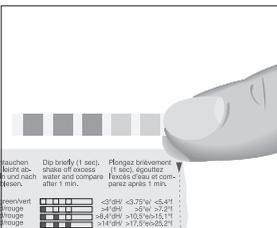

1 Preparing and using for the first time

Level	Display German Degree (°dH)	Degrees of general hardness (°dGH)	Parts per million (ppm)	Indicator Strip number of 'reddish' fields
Not active	–	–	–	–
Very soft water	<3	<3	< 53.4	None
Soft water	> 4	> 4	> 71	1
Hard water	> 8.4	> 8.4	> 150	2
Very hard water	> 14	> 14	> 250	3

First-time use

⚠ WARNING

If the machine is operated with a defective power cord, there is a danger of potentially fatal electric shock.

- ▶ Never use a machine which is damaged.
- ▶ Never use a machine which has a defective power cord.

NOTICE



Milk, sparkling mineral water or other liquids can damage the water tank or the machine.

- ▶ Only fill the water tank with fresh, cold water.

- i** The water volume is given as standard in 'oz'. You can change this setting to 'ml' in programming mode (see Chapter 6 'Permanent settings in programming mode – Unit for amount of water').

Precondition: The bean containers have been filled.

- ▶ Connect the power cord to the machine.
- ▶ Insert the power plug into a power socket.
- ▶ Switch on the GIGA using the power switch on the back of the machine.

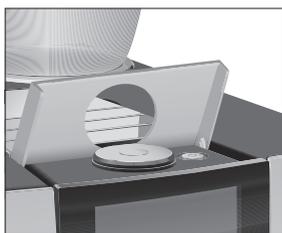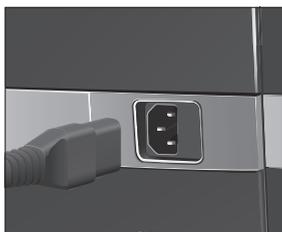

- ▶ Open the cover of the On/Off button.
- ▶ Press the On/Off button  to switch the GIGA on.
'Choose language' / 'English'

- i** To display more languages, move your finger either downwards or upwards in the selection list until the desired language comes into focus (e.g. 'English').

- ▶ Touch 'Save'.
'Saved' appears briefly on the display to confirm the setting.
'Date'
- ▶ Enter the current date (format YYYY/MM/DD).
- ▶ Touch 'Save'.
'Saved'
'Units'
- ▶ Select the time format ('24 hrs.' or 'AM / PM').
- ▶ Touch 'Save'.
'Saved'
'Time'
- ▶ Enter the current time.
- ▶ Touch 'Save'.
'Saved'
'Water hardness'

i If you do not know the hardness of your water, you must find this out first (see Chapter 1 'Preparing and using for the first time – Determining the water hardness').

- ▶ Move your finger across the display to change the water hardness setting, e.g. to '25 °dH'.
- ▶ Touch 'Save'.
'Saved'
'Insert filter'

- ▶ Place one receptacle under the dual spout and another under the hot-water spout.
- ▶ Remove the water tank and rinse it with cold water.
- ▶ Open the filter holder.



- ▶ Insert the filter cartridge into the water tank, exerting slight pressure.
- ▶ Close the filter holder. It will click into place audibly.
- ▶ Fill the water tank with fresh, cold water and reinsert the tank.



i The machine automatically detects that you have just inserted the filter cartridge.

'Filter is being rinsed', the filter is rinsed. Water flows directly into the drip tray.

'System is filling', water flows out of the dual spout and the hot-water spout.

'Empty drip tray'

- ▶ Empty the drip tray and put it back into the machine.

'Filter operation' / 'Saved'

- ▶ Place a receptacle under the dual spout.

'Machine is heating'

'Machine is rinsing', 'Milk system is being rinsed'. The rinse stops automatically. The start screen is displayed. Your GIGA is ready for use.

- i** If the filter is active, this is indicated by a blue filter symbol at the top of the display.

Connecting milk

Your GIGA creates fine, creamy, feather-light milk foam with a perfect consistency. The most important requirement for frothing milk is a milk temperature of 39–46 °F (4–8 °C). We would therefore recommend using a JURA milk cooler.

- ▶ Connect the milk pipe to the dual spout. To do this, attach the end of the milk pipe to the connector on the right-hand side of the dual spout.
- ▶ Connect the other end of the milk pipe to a milk cooler.

Settings by the service technician

Your authorized JURA service technician can change various settings, e.g.:

- Codes: Four codes can be assigned. For each code, you can define which program items are available or disabled. Each code corresponds to different authorizations. For instance, you can define that initiation of the maintenance programs is disabled using a code.
- Activating/deactivating the 'Silent Pump' function (for preparing hot water)
- Choose not to display the red speedometer symbol for speed specialty coffees on the start screen.

2 Preparation

 WARNING

Hot coffee, hot steam and hot water can cause scalding. Scalding is a serious burn.

- ▶ Use extreme care when handling hot liquid or steam.
 - ▶ Allow liquid to cool down before drinking.
 - ▶ In the event of scalding, rinse affected area with cold water and seek medical attention.
 - ▶ Keep children AWAY.
-

Basic information about preparing drinks:

- During the grinding operation you can change the coffee strength of **single products**. To do this, move your finger across the display or turn the Rotary Switch.
- During preparation you can change the preset **amounts** (e.g. amount of water or milk foam). To do this, move your finger across the display or turn the Rotary Switch.
- You can stop preparation at any time. To do this, press the **'Cancel'** button or the Rotary Switch.
- The water volume is given as standard in 'oz'. You can change this setting to 'ml' in programming mode (see Chapter 4 'Permanent settings in programming mode – Unit for amount of water').

Coffee tastes best served hot. A cold porcelain cup cools the beverage – and impairs the taste. We therefore recommend prewarming the cups. The full coffee aroma can develop only in prewarmed cups. You can purchase a JURA cup warmer from your specialized dealer.

You can make **permanent settings** for all products in programming mode (see Chapter 4 'Permanent settings in programming mode – Adjusting the product settings').

Ways of preparing a beverage

The GIGA offers various ways of preparing a specialty coffee, milk or hot water.

Preparation using the start screen: Simply touch the desired product. The following products are displayed as standard on the start screen:

Page '1/2'	Page '2/2'
'Espresso'	'Caffè Barista'
'Coffee'	'Jug of coffee'
'Americano'	'2 x Coffee'
'Hot water'	'2 x Americano'
'Caffè latte'	'Macchiato'
'Flat White'	'Ristretto'
'Latte macchiato'	'Cappuccino'
'Portion milk'	'Portion milk foam'

Using the product selector view (Rotary Selection): Only some of the products you can prepare are shown on the start screen. As soon as you turn the Rotary Switch, more products are displayed in a **product selector view**.

Turn the Rotary Switch or move your finger across the display to bring the desired product into focus. Touch the product or press the Rotary Switch to start preparation. The following additional products are shown in the product selector view:

- 'Special'
- 'Espresso doppio'
- 'Hot water for green tea'
- 'Hot water for black tea'
- '2 x Espresso'
- '2 x Special'
- '2 x Caffè Barista'
- '2 x Cappuccino'
- '2 x Latte macchiato'
- '2 x Caffè latte'
- '2 x Macchiato'
- '2 x Cortado'
- '2 x Flat White'
- '2 x Portion milk'
- '2 x Portion milk foam'

- i** The product selector view disappears automatically after 10 seconds if no preparation is started.
- i** The last product selected always appears first in the product selector view.
- i** You can move any of the standard products programed in your GIGA to your preferred position on the start screen and make it one of your favorites. You can duplicate and personalize your favorite specialty coffees by giving them a new product name and individual settings (e.g. amount and coffee strength) (see Chapter 4 'Permanent settings in programming mode – Product settings'). Please note that the descriptions provided in the following sections always refer to the default settings.

Preparing specialty coffees



Example: Proceed as follows to prepare one coffee.

Precondition: The start screen is displayed.

- ▶ Place a cup under the dual spout.
- ▶ Touch **'Coffee'**.

Preparation starts. The preset amount of water for coffee flows into the cup.

Preparation stops automatically. Your GIGA is once more ready for use.

Preparing two specialty coffees




Example: Proceed as follows to prepare **two Americano** (using product selector view).

Precondition: The start screen is displayed.

- ▶ Place two cups under the dual spout.
- ▶ Turn the Rotary Switch to view the **product selector**.
- ▶ Move your finger across the display until **'2 x Americano'** is displayed in the center.
- ▶ Touch **'2 x Americano'** to start preparation.

Preparation starts. The preset amount of water for coffee flows into the cups. Preparation stops automatically. Your GIGA is once more ready for use.

Preparing specialty coffees with milk

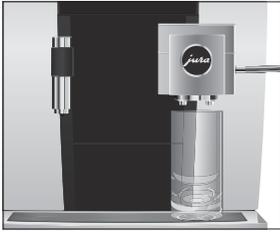

Your GIGA prepares latte macchiato, cappuccino, flat white and other specialty coffees with milk at the touch of a button. There is no need to move the glass or cup.

Example: Proceed as follows to prepare one latte macchiato.

Precondition: The start screen is displayed. Milk is connected to the dual spout.

- ▶ Place a glass under the dual spout.
 - ▶ Touch 'Latte macchiato'.
- 'Latte macchiato', the preset amounts of milk and milk foam flow into the glass.
- i** There is a short interval while the hot milk separates from the milk foam. This allows the typical layers of a latte macchiato to form.

Coffee preparation starts. The preset amount of water for espresso flows into the glass. Preparation stops automatically. Your GIGA is once more ready for use.

- i** 15 minutes after preparation, the milk system is automatically rinsed (see Chapter 5 'Maintenance – Automatic milk system rinsing'). Therefore, always place a receptacle under the dual spout after preparing milk.

To ensure that the milk system in the dual spout always works properly, you must clean it **daily** (see Chapter 5 'Maintenance – Cleaning the milk system').

Caffè Barista and Americano

For the 'Caffè Barista' and 'Americano', the GIGA blends the coffee with hot water using a special preparation method. This results in a full-bodied specialty coffee which is particularly easy to digest. You can change the amount of this additional water (see Chapter 4 'Permanent settings in programming mode – Adjusting the product settings').

Products with a bypass amount of water setting are marked with a **red speedometer symbol** in the start screen and in the product selector.

- i** Your JURA service technician can set the machine so that the red speedometer symbol is not displayed next to these 'speed specialty coffees'.

- i** For products with a set bypass amount of water, it is not possible to change the fill volume during the preparation process.

Ground coffee

You can choose to use another coffee variety, for example decaffeinated coffee, with the filter funnel for ground coffee.

Basic information about ground coffee:

- Never add more than two level measuring spoons of ground coffee.
- Use ground coffee which is not ground too finely. Very fine coffee can block up the system so that the coffee only comes out in drips.
- If you did not fill the machine with a sufficient amount of ground coffee, 'Not enough ground coffee' is displayed and the GIGA stops the operation.
- The desired specialty coffee must be prepared within approximately one minute after filling with the ground coffee. Otherwise the GIGA stops the operation and is once more ready for use.
- All specialty coffees with ground coffee are always prepared following the same model.

Example: Proceed as follows to prepare one coffee using ground coffee.

Precondition: The start screen is displayed.

- ▶ Place a cup under the dual spout.
- ▶ Open the cover of the filler funnel for ground coffee.
'Please add ground coffee'
- ▶ Place one level measuring spoon of ground coffee into the filler funnel.
- ▶ Close the cover of the filler funnel.
The specialty coffees you can prepare with ground coffee are displayed.
- ▶ Touch 'Coffee'.
Preparation starts. 'Coffee' and the fill volume are displayed.
The preset amount of water for coffee flows into the cup.
Preparation stops automatically. Your GIGA is once more ready for use.



Activating the grinder selection

You have the option of configuring the start screen such that the grinder selection ('Beans à la carte') is always displayed. Before each preparation, you can select which grinder is to be used and therefore which coffee beans are to be used.

- i** If the grinder selection is activated, you can no longer set the grinder for the individual products in programming mode (in the 'Product settings' program item).

Example: Proceed as follows to activate the grinder selection.

Precondition: The start screen is displayed.

- ▶ Touch 'P'.
- ▶ 'Maintenance status' is displayed.
- ▶ Turn the Rotary Switch until 'Machine settings' is displayed.
- ▶ Press the Rotary Switch.
- ▶ 'Machine settings' is displayed.
- ▶ Press the Rotary Switch.
- ▶ 'Switch off after' is displayed.
- ▶ Turn the Rotary Switch until 'Beans à la carte' is displayed.
- ▶ Press the Rotary Switch.
- ▶ 'Beans à la carte' is displayed.
- ▶ Now move your finger across the controller and set it to '1'.
- ▶ Touch 'Save'.
- ▶ 'Saved' appears briefly on the display.
- ▶ 'Beans à la carte' is displayed.
- ▶ Touch 'Back' the number of times needed to display the start screen again.

Preparation of a specialty coffee with grinder selection

Example: Proceed as follows to prepare an espresso with coffee beans from the **grinder on the left**.

Precondition: The start screen is displayed. 'Beans à la carte' mode is activated.

- ▶ Place a cup under the dual spout.
- ▶ Touch '+' on the left-hand side several times until the value is set to '100%'.

- i** The grinder selection remains active until the setting is changed by you, even if the GIGA is switched off in the meantime.



- ▶ Touch **'Espresso'**.

Preparation starts. The preset amount of water for espresso flows into the cup.

Preparation stops automatically. Your GIGA is once more ready for use.

Hot water

The GIGA allows you to prepare different variants of hot water:

- **'Hot water'**
- **'Hot water for green tea'**
- **'Hot water for black tea'**

⚠ CAUTION

There is a danger of scalding from hot water splashes.

- ▶ Avoid direct contact with the skin.



Example: Proceed as follows to prepare hot water for **black tea**.

Precondition: The start screen is displayed.

- ▶ Place a cup under the hot-water spout.
- ▶ Turn the Rotary Switch to view the product selector.
- ▶ Move your finger across the display until **'Hot water for black tea'** is in focus.
- ▶ Touch **'Hot water for black tea'**.

'Hot water for black tea', the preset amount of water flows into the cup.

Preparation stops automatically. Your GIGA is once more ready for use.

3 Daily operation

Filling the water tank

Daily maintenance of the machine and hygiene when handling milk, coffee and water are key to a perfect coffee result in the cup every time. You should therefore change the water **daily**.


NOTICE

Milk, sparkling mineral water or other liquids can damage the water tank or the machine.


- ▶ Only fill the water tank with fresh, cold water.
- ▶ Open the water tank cover.
- ▶ Remove the water tank and rinse it with cold water.
- ▶ Fill the water tank with fresh, cold water and reinsert the tank.
- ▶ Close the water tank cover.



Switching on the machine

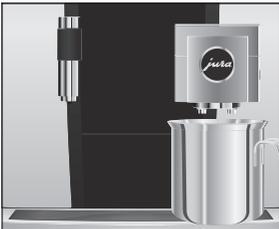


- ▶ Place a receptacle under the dual spout.

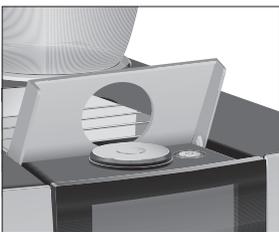

- ▶ Open the cover of the On/Off button.
- ▶ Press the On/Off button  to switch the GIGA on.
'Welcome to JURA'
'Machine is heating'
'Machine is rinsing', the system is rinsed. The rinse stops automatically. Your GIGA is ready for use.

Daily maintenance

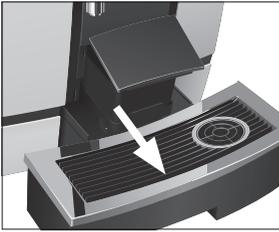

To ensure that you get many years of reliable service out of your GIGA and to guarantee the optimum coffee quality, the machine requires daily maintenance.

- ▶ Pull out the drip tray.
 - ▶ Empty the coffee grounds container and the drip tray. Rinse them both with warm water.
- i** Always empty the coffee grounds container when the machine is **switched on**. This is the only way of resetting the coffee grounds counter.
- i** The insert for the drip tray, including the drip tray itself, and the coffee grounds container are dishwasher-safe.
- ▶ Refit the coffee grounds container and the drip tray.
 - ▶ Rinse the water tank with clean water.
 - ▶ Clean the milk system in the dual spout (see Chapter 5 ‘Maintenance – Cleaning the milk system’).
 - ▶ Remove the milk pipe and rinse it thoroughly under running water.
 - ▶ Dismantle and rinse the dual spout (see Chapter 5 ‘Maintenance – Dismantling and rinsing the dual spout’).
 - ▶ Wipe the surface of the machine with a clean, soft, damp cloth (e.g. microfiber cloth).
- i** To clean the display, you can disable it under ‘**Maintenance status**’ / ‘**Lock display**’.

You will find more information about caring for your GIGA in programming mode under ‘**Maintenance status**’ / ‘**Maintenance information**’.

Regular maintenance

Carry out the following maintenance actions **regularly** or **as required**:

- In the interests of hygiene, we recommend changing the milk pipe and interchangeable milk spout on a regular basis (approximately every 3 months). Replacements are available from specialized dealers.

- Clean the inside of the water tank, e.g. with a brush. Further information about the water tank is provided in these instructions for use (see Chapter 5 ‘Maintenance – Descaling the water tank’).
- Traces of milk and coffee may stick to the top and bottom of the cup platform. If this happens, clean the cup platform.



Switching off the machine

When the GIGA is switched off, the system is automatically rinsed if a specialty coffee has been prepared.

- i** If milk has been prepared, you will also be prompted to clean the milk system. If this happens, follow the instructions on the display.

Precondition: The start screen is displayed.

- ▶ Place a receptacle under the dual spout.

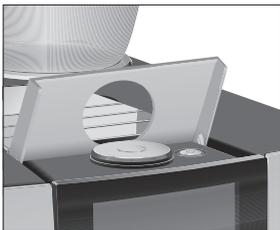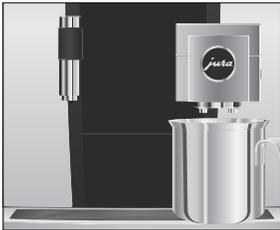

- ▶ Open the cover of the On/Off button.
 - ▶ Press the On/Off button .
- ‘Machine is rinsing’, the system rinses itself. The operation stops automatically. Your GIGA is switched off.

4 Permanent settings in programming mode

WARNING

Hot coffee, hot steam and hot water can cause scalding. Scalding is a serious burn.

- ▶ Use extreme care when handling hot liquid or steam.
- ▶ Allow liquid to cool down before drinking.
- ▶ In the event of scalding, rinse affected area with cold water and seek medical attention.
- ▶ Keep children AWAY.

Touch 'P' to enter programming mode. Move your finger across the display or turn the Rotary Switch to navigate through the program items and permanently save the desired settings. The following settings can be made:

Program item	Sub-item	Explanation
'Maintenance status' ('1/4')	'Clean', 'Change the filter' (only if filter is fitted), 'Descal', 'Clean the milk system', 'Rinse', 'Lock display', 'Maintenance information'	▶ Start the required maintenance program here.
'Machine settings' ('2/4')	'Switch off after'	▶ Set the time after which the GIGA should switch off automatically.
	'Time', 'Date'	▶ Set the time and date to use the timer function on your GIGA.
	'Timer'	▶ Specify a switch-on and switch-off time for each weekday.
	'Beans à la carte'	▶ Activate the grinder selection.
	'Set consistency of grind'	▶ Adjust the consistency of grind for both grinders to the coffee beans used.
	'Save energy'	▶ Activate energy-saving mode.
	'Lock/enable'	▶ Disable different machine functions.
	'Factory setting'	▶ Reset the machine to its factory setting.

4 Permanent settings in programming mode

Program item	Sub-item	Explanation
	'Units'	▶ Select the unit for the amount of water and the time format.
	'Display'	▶ Change the display brightness.
	'Water hardness'	▶ You can set the water hardness of the water used.
	'Choose language'	▶ Select your language.
	'Connect accessory', 'Disconnect accessories' (Only displayed if the JURA Smart Connect is being used.)	▶ Connect the GIGA wirelessly to a JURA accessory or disconnect the connection again.
	'Empty system'	▶ Empty the system to protect it from frost during transport.
	'Version'	Software version
'Product settings' (3/4)		▶ Select your settings for specialty coffees and hot water.
'Information' (4/4)	'Product counter', 'Day counter', 'Maintenance counter'	▶ Keep track of all products prepared and view the number of maintenance programs performed.

Product settings

Touch a product for **approximately 2 seconds** to view the list of setting options:

- 'Product settings': Specify individual settings such as coffee strength, amount of water, etc.
- 'Product name': Change the name of the product.
- 'Delete': Delete the product from the start screen.
- 'Produkt ersetzen': Replace the products on the start screen with your favorites.
- 'Copy product': Duplicate any product, for example to create a variant with a new product name and individual settings.
- 'Double product' (not for products with milk or hot water): Create a double product of the desired specialty.

Adjusting the product settings



Hot coffee, hot steam and hot water can cause scalding. Scalding is a serious burn.

- ▶ Use extreme care when handling hot liquid or steam.
- ▶ Allow liquid to cool down before drinking.
- ▶ In the event of scalding, rinse affected area with cold water and seek medical attention.
- ▶ Keep children AWAY.

Permanent settings in programming mode always follow the same model.

Example: Proceed as follows to change the coffee strength for one espresso.

Precondition: The start screen is displayed.

- ▶ Touch **'Espresso'** for **approximately 2 seconds** until the list of possible settings is displayed.
- ▶ Touch **'Product settings'**.
'Espresso'
- ▶ Move your finger across the display until **'Coffee strength'** is displayed in the center.
- ▶ Now move your finger to the left or right to change the setting for the coffee strength.
- ▶ Touch **'Save'**.
'Saved' appears briefly on the display.
- ▶ Touch **'Back'** to return to the start screen.

Setting the consistency of grind

In the program item **'Product settings'** / **'Set consistency of grind'** you can adjust both grinders separately to the degree of roast of your coffee.

The consistency of grind is correct if the coffee flows regularly from the dual spout. In addition, a fine, thick crema forms.

Example: Proceed as follows to change the consistency of grind for the grinder on the **right**.

Precondition: The start screen is displayed.

- ▶ Touch 'P'.
'Maintenance status'
- ▶ Turn the Rotary Switch until 'Machine settings' is displayed.
- ▶ Press the Rotary Switch.
'Machine settings'
- ▶ Press the Rotary Switch.
'Switch off after'
- ▶ Turn the Rotary Switch until 'Set consistency of grind' is displayed.
- ▶ Press the Rotary Switch.
'Left grinder'
- ▶ Touch 'Save'.
'Right grinder'
- ▶ Turn the Rotary Switch to change the setting.
- ▶ Touch 'Save'.
'Saved' appears briefly on the display.
'Set consistency of grind'
- ▶ Touch 'Back' the number of times needed to display the start screen again.

Automatic switch-off

By instructing your GIGA to automatically switch itself off, you can cut down your energy consumption. If this function is activated, your GIGA switches off automatically after the preset time following the last action on the machine.

You can set the automatic switch-off to 15 minutes, 30 minutes or 1 – 15 hours.

Precondition: The start screen is displayed.

- ▶ Touch 'P'.
'Maintenance status'
- ▶ Turn the Rotary Switch until 'Machine settings' is displayed.
- ▶ Press the Rotary Switch.
'Machine settings'
- ▶ Press the Rotary Switch.
'Switch off after'
- ▶ Now move your finger to the left or right to change the switch-off time.

- ▶ Touch 'Save'.
'Saved' appears briefly on the display.
'Switch off after'
- ▶ Touch 'Back' the number of times needed to display the start screen again.

Time and date

You already set the time and date during first-time use. You can change this setting in programming mode:

- 'Machine settings' / 'Time'
- 'Machine settings' / 'Date'

i For the time format, you can choose between '24 hrs' and 'AM / PM' (see Chapter 4 'Permanent settings in programming mode – Unit for amount of water / time format').

Example: Proceed as follows to change the time.

Precondition: The start screen is displayed.

- ▶ Touch 'P'.
'Maintenance status'
- ▶ Turn the Rotary Switch until 'Machine settings' is displayed.
- ▶ Press the Rotary Switch.
'Machine settings'
- ▶ Press the Rotary Switch.
'Switch off after'
- ▶ Turn the Rotary Switch until 'Time' is displayed.
- ▶ Press the Rotary Switch.
'Time'
- ▶ Enter the current time.
- ▶ Touch 'Save'.
'Saved' appears briefly on the display.
'Time'
- ▶ Touch 'Back' the number of times needed to display the start screen again.

Timer

In the program item 'Machine settings' / 'Timer' you can set a switch-on and switch-off time for every weekday.

i For the time format, you can choose between '24 hrs' and 'AM / PM' (see Chapter 4 'Permanent settings in programming mode – Unit for amount of water / time format').

Example: Proceed as follows to set the GIGA to switch on on **Mondays** at a time defined by you.

Precondition: The start screen is displayed.

- ▶ Touch 'P'.
'Maintenance status'
- ▶ Turn the Rotary Switch until 'Machine settings' is displayed.
- ▶ Press the Rotary Switch.
'Machine settings'
- ▶ Press the Rotary Switch.
'Switch off after'
- ▶ Turn the Rotary Switch until 'Timer' is displayed.
- ▶ Press the Rotary Switch.
'Timer'
- ▶ Touch 'Monday'.
'Switch machine on'
- ▶ Enter the desired switch-on time.
- ▶ Touch 'Save'.
'Switch machine off'
- ▶ Touch 'Back' the number of times needed to display the start screen again.

Setting the water hardness

The harder the water is, the more frequently the GIGA needs to be descaled. It is therefore important to set the water hardness accurately.

The water hardness was set when the machine was first used. You can change this setting at any time.

The water hardness can be adjusted on a continuous scale between 1 °dH and 30 °dH.

Precondition: The start screen is displayed.

- ▶ Touch 'P'.
'Maintenance status'
- ▶ Turn the Rotary Switch until 'Machine settings' is displayed.
- ▶ Press the Rotary Switch.
'Machine settings'
- ▶ Press the Rotary Switch.
'Switch off after'

- ▶ Move your finger across the display until 'Water hardness' is displayed in the center.
- ▶ Touch 'Water hardness'.
'Water hardness'
- ▶ Now move your finger to the left or right to change the setting.
- ▶ Touch 'Save'.
'Saved' appears briefly on the display.
'Water hardness'
- ▶ Touch 'Back' the number of times needed to display the start screen again.

Unit for amount of water / time format

You can change the unit for the amount of water as well as the time format in programming mode ('Machine settings' / 'Units');

- 'Change units' ('ml' / 'oz')
- 'Set time format' ('24 hrs.' / 'AM / PM')

Example: Proceed as follows to change the unit for the amount of water from 'ml' to 'oz'.

Precondition: The start screen is displayed.

- ▶ Touch 'P'.
'Maintenance status'
- ▶ Turn the Rotary Switch until 'Machine settings' is displayed.
- ▶ Press the Rotary Switch.
'Machine settings'
- ▶ Press the Rotary Switch.
'Switch off after'
- ▶ Move your finger across the display until 'Units' is displayed in the center.
- ▶ Touch 'Units'.
'Units'
- ▶ Now move your finger to the left or right to change the setting to 'oz'.
- ▶ Touch 'Save'.
'Saved' appears briefly on the display.
'Units'
- ▶ Touch 'Back' the number of times needed to display the start screen again.

Energy-saving mode

In the program item **'Machine settings'** / **'Save energy'** you can set an energy-saving mode:

- **'1'**
 - Soon after the last preparation, the GIGA stops heating up. After approximately 5 minutes, the 'ESM' symbol (E.S.M.® , Energy Save Mode) is displayed.
 - Before you can prepare a specialty coffee, specialty coffee with milk, or hot water, the machine must heat up.
- **'0'**
 - All specialty coffees, specialty coffees with milk and hot water can be prepared without having to wait.

Example: Proceed as follows to switch energy-saving mode off.

Precondition: The start screen is displayed.

- ▶ Touch **'P'**.
'Maintenance status'
- ▶ Turn the Rotary Switch until **'Machine settings'** is displayed.
- ▶ Press the Rotary Switch.
'Machine settings'
- ▶ Press the Rotary Switch.
'Switch off after'
- ▶ Move your finger across the display until **'Save energy'** is displayed in the center.
- ▶ Touch **'Save energy'**.
'Save energy'
- ▶ Now move your finger across the controller and set it to **'0'**.
- ▶ Touch **'Save'**.
'Saved' appears briefly on the display.
'Save energy'
- ▶ Touch **'Back'** the number of times needed to display the start screen again.

Enabling and disabling functions

In the program item **'Machine settings'** / **'Lock/enable'** you can disable/enable the following settings:

- **'One-off settings'**: One-off settings can be made **during preparation** (e.g. coffee strength or amount of water).
- **'Expert mode'**: You can access the product settings by touching a product for approximately 2 seconds.

- **‘Rotary Selection’**: **Product selector view** with additional products can be started by turning the Rotary Switch.
- **‘Alarm displays’**: The start screen displays messages such as **‘Clean machine’** or **‘Clean the milk system’**.

Example: Proceed as follows to prevent **one-off settings** being made during preparation.

Precondition: The start screen is displayed.

- ▶ Touch **‘ P ’**.
‘Maintenance status’
- ▶ Turn the Rotary Switch until **‘Machine settings’** is displayed.
- ▶ Press the Rotary Switch.
‘Machine settings’
- ▶ Press the Rotary Switch.
‘Switch off after’
- ▶ Turn the Rotary Switch until **‘Lock/enable’** is displayed.
- ▶ Press the Rotary Switch.
‘Lock/enable’
- ▶ Touch **‘One-off settings’**.
‘One-off settings’
- ▶ Now move your finger across the controller to close the lock symbol.
- ▶ Touch **‘Save’**.
‘Saved’ appears briefly on the display.
‘Lock/enable’
- ▶ Touch **‘Back’** the number of times needed to display the start screen again.

Language

In this program item you can set the language used by your GIGA.

Example: Proceed as follows to change the language from **‘English’** to **‘Français’**.

Precondition: The start screen is displayed.

- ▶ Touch **‘ P ’**.
‘Maintenance status’
- ▶ Turn the Rotary Switch until **‘Machine settings’** is displayed.
- ▶ Press the Rotary Switch.
‘Machine settings’
- ▶ Press the Rotary Switch.
‘Switch off after’

- ▶ Move your finger across the display until 'Choose language' is displayed in the center.
- ▶ Touch 'Choose language'.
'Choose language'
- ▶ Move your finger across the display until the desired language, e.g. 'Deutsch', is displayed in the center.
- ▶ Touch 'Save'.
'Enregistrer' appears briefly on the display.
'Langue'
- ▶ Touch 'Retour' the number of times needed to display the start screen again.

Display brightness

In the program item 'Machine settings' / 'Display' you can set the display brightness (as a percentage).

Precondition: The start screen is displayed.

- ▶ Touch 'P'.
'Maintenance status'
- ▶ Turn the Rotary Switch until 'Machine settings' is displayed.
- ▶ Press the Rotary Switch.
'Machine settings'
- ▶ Press the Rotary Switch.
'Switch off after'
- ▶ Move your finger across the display until 'Display' is displayed in the center.
- ▶ Touch 'Display'.
'Display'
- ▶ Now move your finger to the left or right to change the setting.
- ▶ Touch 'Save'.
'Saved' appears briefly on the display.
'Display'
- ▶ Touch 'Back' the number of times needed to display the start screen again.

Restore factory settings

In the program item 'Machine settings' / 'Factory setting' the machine can be reset to its factory setting: **All user settings** (apart from the 'water hardness') are reset to factory settings. Your GIGA then switches off.

Precondition: The start screen is displayed.

- ▶ Touch 'P'.
'Maintenance status'
- ▶ Turn the Rotary Switch until 'Machine settings' is displayed.
- ▶ Press the Rotary Switch.
'Machine settings'
- ▶ Press the Rotary Switch.
'Switch off after'
- ▶ Move your finger across the display until 'Factory setting' is displayed in the center.
- ▶ Touch 'Factory setting'.
'Factory setting' / 'Reset the machine to the factory settings?'
- ▶ Touch 'Yes'.
'Saved' appears briefly on the display.
Your GIGA is switched off.

Querying information

In the program item 'Information' you can view the following information:

- 'Product counter': Number of prepared specialty coffees and hot water
- 'Day counter': Number of prepared specialty coffees and hot water. This counter can be reset to zero.
- 'Maintenance counter': Number of maintenance programs performed (cleaning, descaling etc.)

Example: Proceed as follows to view the number of specialty coffees prepared.

Precondition: The start screen is displayed.

- ▶ Touch 'P'.
'Maintenance status'
- ▶ Turn the Rotary Switch until 'Information' is displayed.
- ▶ Press the Rotary Switch.
'Product counter'
- ▶ Touch '1/2' or turn the Rotary Switch to view the number of other products.
- ▶ Touch 'Back' the number of times needed to display the start screen again.

5 Maintenance

⚠ WARNING

Use of maintenance products that are harmful to health and discharge of liquids during maintenance program. Harmful if swallowed. Irritating to eyes and skin.

- ▶ Keep children AWAY.
- ▶ Keep children away from the machine while it is performing a maintenance program.
- ▶ Avoid contact with skin and eyes.
- ▶ Avoid generation of dust. Do not inhale dust.
- ▶ When using do not eat or drink.
- ▶ Keep maintenance products away from food, drink and animal food.
- ▶ Keep container tightly closed and dry. Keep in a cool place.

Your GIGA has the following integrated maintenance programs:

- Rinsing the machine ('Rinse')
- Rinsing the milk system in the dual spout
- Cleaning the milk system in the dual spout ('Clean the milk system')
- Changing the filter ('Change the filter') (only if filter is activated)
- Cleaning the machine ('Clean')
- Descaling the machine ('Descale')

i Carry out each maintenance program when you are prompted to do so.

i In the interests of hygiene, you should clean the milk system **daily** when you have been preparing milk.

Rinsing the machine



You can initiate the rinse operation manually at any time.

Precondition: The start screen is displayed.

- ▶ Place a receptacle under the dual spout.
- ▶ Touch 'P'.
- ▶ Touch 'Maintenance status'.
- ▶ Touch 'Maintenance status'.
- ▶ Move your finger across the display until 'Rinse' is displayed in the center.

- ▶ Touch **'Rinse'** to start the rinse operation.
'Machine is rinsing', **'Milk system is being rinsed'**, water flows out of the dual spout.
The rinse stops automatically. Your GIGA is once more ready for use.

Automatic milk system rinsing

15 minutes after milk preparation, the milk system is **automatically** rinsed. Therefore, always place a receptacle under the dual spout after preparing milk.

Cleaning the milk system

To ensure that the milk system in the dual spout always works properly, you must clean it **daily** when you have been preparing milk.

WARNING

Non-recommended cleaning agents will not optimally remove milk residues. This may cause the cappuccino frother to become blocked and fly off the machine. Discharge of hot steam.

- ▶ Use only original JURA milk system cleaner.

WARNING

Harmful and irritating cleaning agent. Harmful if swallowed. Irritating to eyes and skin.

- ▶ Keep children **AWAY**.
- ▶ Avoid contact with skin and eyes.
- ▶ After contact with skin, wash immediately with plenty of water. In case of skin irritation, seek medical advice.
- ▶ After eye contact, immediately flush eyes with plenty of water and seek medical advice.
- ▶ If swallowed, rinse mouth immediately and drink large quantities of water. Do not induce vomiting. Seek medical advice immediately and show label.



 JURA milk system cleaner is available from specialized dealers.

 To clean the milk system, use the container supplied.

Precondition: The start screen is displayed. **'Clean the milk system'** is displayed.

- ▶ Touch **'Clean the milk system'**.
- ▶ Touch **'Clean the milk system'** again.
- ▶ Touch **'Start'**.



- ▶ Touch **'Start'** again.
'Milk system cleaner' / **'Connect the milk tube'**
- ▶ Remove the milk pipe from the milk container.
- ▶ Pour one dosing unit of milk system cleaner to the **rear** part of the container.

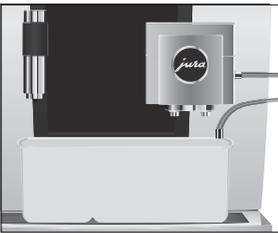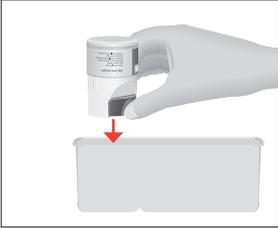

- ▶ Place the container under the dual spout and connect the milk pipe with the container.
- i** To connect the milk pipe to the container correctly, the pipe must be fitted with a connector.
- ▶ Touch **'Next'**.
'Milk system is being cleaned', the dual spout and the milk pipe are cleaned.
The operation stops automatically. Your GIGA is once more ready for use.

Dismantling and rinsing the dual spout


The dual spout must be dismantled and rinsed **daily** if milk has been prepared to make sure it functions perfectly and, in the interests of hygiene.

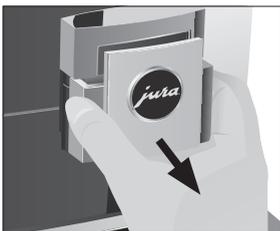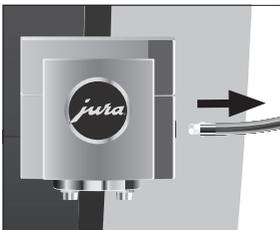


- ▶ Remove the milk pipe and rinse it thoroughly under running water.
-
- ▶ Pull the cover of the dual spout forwards and off.



- ▶ Remove the milk system from the dual spout.

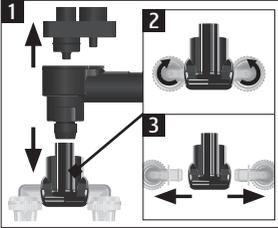

- ▶ Dismantle the milk system into its individual parts.
- ▶ Rinse all the parts under running water. If there are severely dried-on milk residues, firstly immerse the individual parts in a solution of 250 ml warm water and one dosing unit of JURA milk system cleaner. Then rinse the parts thoroughly.

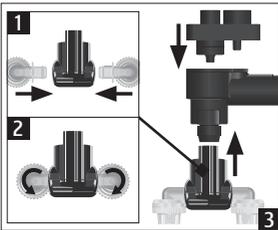


- ▶ Reassemble the milk system.



- ▶ Fit the assembled individual parts back in the dual spout and press it firmly.



- ▶ Fit the cover of the dual spout.

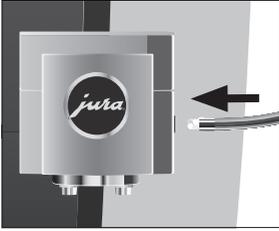

- ▶ Connect the milk pipe to the dual spout.

Inserting/changing the filter

Your GIGA no longer must be descaled if you are using the CLEARYL Pro Smart filter cartridge.

- i** Once the filter cartridge stops working (depending on the water hardness setting), the GIGA will prompt you to change the filter.
- i** CLEARYL Pro Smart filter cartridges are available from specialized dealers.

Precondition: The start screen is displayed. 'Change the filter' is displayed (if you are already using a filter).

- ▶ Remove and empty the water tank.
- ▶ Open the filter holder and remove the **old** CLEARYL Pro Smart filter cartridge.
- ▶ Insert a **new** CLEARYL filter cartridge Pro Smart into the water tank, exerting slight pressure.
- ▶ Close the filter holder. It will click into place audibly.
- ▶ Fill the water tank with fresh, cold water and reinsert the tank.



- i** The machine automatically detects that you have just inserted/changed the filter cartridge.

'Filter operation' / 'Saved'

'Filter is being rinsed', the filter is rinsed. The water flows directly into the drip tray.

'Empty drip tray'

- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.

The start screen is displayed. Your GIGA is once more ready for use.

Cleaning the machine

After 180 preparations or 80 switch-on rinses, the GIGA will prompt you to clean it.

WARNING

Non-recommended (e.g. liquid) cleaning agents may contain substances that could damage the machine or leave residues.

- ▶ Use only original JURA cleaning tablets. These are specially formulated for your machine.

WARNING

Harmful and irritating cleaning agent. Harmful if swallowed. Irritating to eyes and skin.



- ▶ Keep children AWAY.
- ▶ Avoid contact with skin and eyes.
- ▶ Avoid generation of dust. Do not inhale dust.
- ▶ After contact with skin, wash immediately with plenty of water. In case of skin irritation, seek medical advice.
- ▶ After eye contact, immediately flush eyes with plenty of water and seek medical advice.
- ▶ If swallowed, rinse mouth immediately and drink large quantities of water. Do not induce vomiting. Seek medical advice immediately and show label.

-  The cleaning program lasts approximately 20 minutes.
-  Do not interrupt the cleaning program. The quality of cleaning will be impaired if you do so.
-  JURA cleaning tablets are available from specialized dealers.

Precondition: The start screen is displayed. 'Clean machine' is displayed.

- ▶ Touch 'Clean machine'.
- ▶ Touch 'Clean'.
- ▶ Touch 'Start'.
- ▶ Touch 'Start' again.
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
- ▶ Press the Rotary Switch'

5 Maintenance

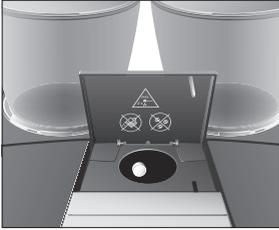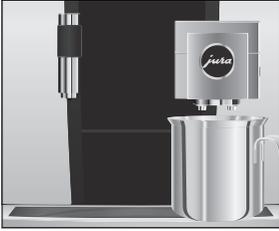

- ▶ Place a receptacle under the dual spout.
- ▶ Press the Rotary Switch.
'Machine is being cleaned', water flows out of the dual spout.
The operation is interrupted, **'Add cleaning tablet'**.
- ▶ Open the cover of the filler funnel for ground coffee.

- ▶ Insert a JURA cleaning tablet into the filler funnel.
- ▶ Close the cover of the filler funnel.
'Press the Rotary Switch'
- ▶ Press the Rotary Switch.
'Machine is being cleaned', water flows out of the dual spout repeatedly.
The operation stops automatically.
'Empty coffee grounds container'
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
Cleaning is now complete. The start screen is displayed.

Descaling the machine

The GIGA builds up deposits of limescale over time and automatically prompts you to descale it when necessary. The degree of calcification depends on the hardness of your water.

- i** If you are using a CLEARYL Pro Smart filter cartridge, you will not be prompted to descale.

⚠ WARNING

Non-recommended descaling agents (e.g. vinegar) may contain substances that could damage the machine or leave residues.

- ▶ Use only original JURA descaling tablets. These are formulated especially for your machine.

⚠ WARNING

Harmful and irritating descaling agent. Harmful if swallowed. Irritating to eyes and skin.

- ▶ Keep children AWAY.
- ▶ Avoid contact with skin and eyes.
- ▶ Avoid generation of dust. Do not inhale dust.
- ▶ After contact with skin, wash immediately with plenty of water. In case of skin irritation, seek medical advice.
- ▶ After eye contact, immediately flush eyes with plenty of water. Remove contact lenses. Seek medical advice.
- ▶ If swallowed, rinse mouth immediately and drink large quantities of water. Do not induce vomiting. Seek medical advice immediately and show label.

NOTICE

If the descaling operation is interrupted, there may be damage to the machine.




- ▶ Allow the descaling program to run to the end.

- i** The descaling program lasts approximately 45 minutes.
- i** JURA descaling tablets are available from specialized dealers.
- i** If the descaling agent comes into contact with sensitive surfaces (e.g. marble), damage cannot be ruled out. Clean up any splashes immediately.

Precondition: The start screen is displayed. 'Decalcify machine' is displayed.

- ▶ Touch 'Decalcify machine'.
- 'Descale'
- ▶ Touch 'Descale'.
- ▶ Touch 'Start'.
- ▶ Touch 'Start' again.
- 'Empty drip tray'
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
- 'Pour descaling agent into water tank'
- ▶ Remove and empty the water tank.

5 Maintenance

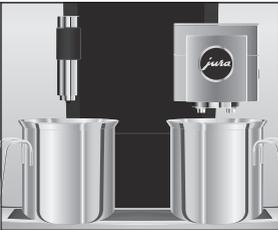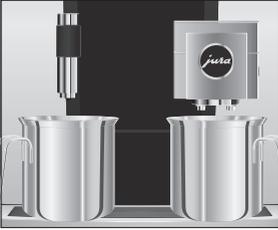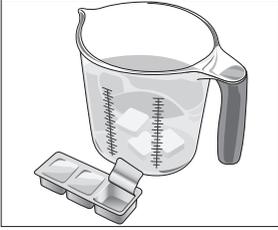

- ▶ Completely dissolve 4 JURA descaling tablets in a receptacle holding 800 ml of water. This may take several minutes.
- ▶ Pour the solution into the **empty** water tank and insert it into the machine.

'Press the Rotary Switch'

- ▶ Place one receptacle under the dual spout and another under the hot-water spout.
 - ▶ Press the Rotary Switch.
- 'Machine is being descaled'**, water flows straight into the drip tray and out of the hot-water spout and dual spout repeatedly.

The operation is interrupted, **'Empty drip tray'**.

- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.

'Fill water tank'

- ▶ Empty the receptacles and place them back under the dual spout and the hot-water spout.
- ▶ Remove the water tank and rinse it thoroughly.
- ▶ Fill the water tank with fresh, cold water and reinsert the tank.

'Press the Rotary Switch'

- ▶ Press the Rotary Switch.
- 'Machine is being descaled'**, the descaling operation is continued. Water flows straight into the drip tray and out of the hot-water spout and dual spout repeatedly.

'Empty drip tray'


- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.

Descaling is now complete. The start screen is displayed.

i If the descaling operation stops unexpectedly, rinse the water tank thoroughly.

Cleaning the bean container

Coffee beans may be covered with a slight oil film which remains on the walls of the bean containers. These traces may negatively affect the coffee result. For this reason, clean the bean containers from time to time.

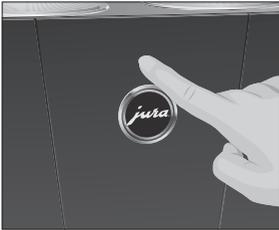

- ▶ Press the On/Off button  to switch the GIGA off.
- ▶ Switch the machine off at the power switch.
- ▶ Open the service cover on the back of the machine by pressing above the JURA logo.
- ▶ Push the red sliding catch completely to the rear to close the bean container.

- ▶ Turn the blue locking device outwards.
- ▶ Remove the bean container.
- ▶ Remove the aroma preservation cover.
- ▶ Empty the bean container.
- ▶ Clean the bean container with a soft, dry cloth.
- ▶ Fit the bean container.

- ▶ Turn the blue locking device inwards.
- ▶ Pull the red sliding catch completely forwards.
- ▶ Refit the service cover and fix it by pressing above the JURA logo. It will click into place audibly.
- ▶ Fill the bean container with coffee beans and close the aroma preservation cover.

Descaling the water tank

Limescale deposits may form in the water tank. To ensure correct function of the machine, descale the water tank from time to time.

- ▶ Remove the water tank.
- ▶ If you use a CLEARYL Pro Smart filter cartridge, remove this.
- ▶ Completely fill the water tank and dissolve 3 JURA descaling tablets in it.
- ▶ Leave the water tank with the descaling solution for several hours (e.g. overnight).
- ▶ Empty the water tank and rinse it thoroughly.
- ▶ If you use a CLEARYL Pro Smart filter cartridge, insert this again.
- ▶ Fill the water tank with fresh, cold water and reinsert the tank.

6 Display messages

Message	Cause/Result	Action
'Fill water tank'	The water tank is empty. You cannot prepare any products.	▶ Fill the water tank (see Chapter 3 'Daily operation – Filling the water tank').
'Empty coffee grounds container' / 'Empty drip tray'	The coffee grounds container is full. / The drip tray is full. You cannot prepare any products.	▶ Empty the coffee grounds container and the drip tray (see Chapter 3 'Daily operation – Daily maintenance').
'Close front cover'	The coffee grounds container cover is open. You cannot prepare any products.	▶ Close the cover.
'Drip tray not fitted'	The drip tray is not inserted correctly or is not inserted at all. You cannot prepare any products.	▶ Fit the drip tray.
'Fill left bean container' / 'Fill right bean container'	One of the bean containers is empty. You cannot prepare any specialty coffees for which coffee beans are required from this bean container. You can prepare hot water or milk.	▶ Fill the bean container (see Chapter 1 'Preparing and using for the first time – Filling the bean container').
'Clean the milk system'	The GIGA prompts you to clean the milk system.	▶ Perform milk system cleaning (see Chapter 5 'Maintenance – Cleaning the milk system').
'Change the filter'	The filter cartridge no longer works. The GIGA is prompting a filter change.	▶ Replace the CLEARYL Pro Smart filter cartridge (see Chapter 5 'Maintenance – Inserting/ changing the filter').
'Clean machine'	The GIGA is prompting you to clean it.	▶ Perform cleaning (see Chapter 5 'Maintenance – Cleaning the machine').
'Decalcify machine'	The GIGA is prompting you to descale it.	▶ Perform descaling (see Chapter 5 'Maintenance – Descaling the machine').

Message	Cause/Result	Action
'Not enough ground coffee'	There is insufficient ground coffee in the machine; the GIGA stops the operation.	► The next time you prepare a beverage, add more ground coffee (see Chapter 2 'Preparation – Ground coffee').
'Service cover is not fitted'	The service cover on the back of the machine is not fitted. You cannot prepare any products.	► Fit the service cover.

7 Troubleshooting

Problem	Cause/Result	Action
Insufficient foam is produced when the milk is frothed or milk sprays from the dual spout.	The dual spout is dirty.	<ul style="list-style-type: none"> ▶ Clean the milk system in the dual spout (see Chapter 5 ‘Maintenance – Cleaning the milk system’). ▶ Dismantle and rinse the dual spout (see Chapter 5 ‘Maintenance – Dismantling and rinsing the dual spout’).
	The milk and milk foam temperature is set too high.	<ul style="list-style-type: none"> ▶ Set a lower milk and milk foam temperature for the product.
Coffee only comes out in drips when it is being prepared.	<p>Coffee or ground coffee has been ground too finely and is blocking the system.</p> <p>The water hardness may not have been correctly set.</p>	<ul style="list-style-type: none"> ▶ Put the grinder on a coarser setting or use coarser ground coffee (see Chapter 4 ‘Permanent settings in programming mode – Setting the consistency of grind’). ▶ Perform descaling (see Chapter 5 ‘Maintenance – Descaling the machine’).
‘Fill bean container’ is not displayed although the bean container is empty.	The bean monitor is dirty.	<ul style="list-style-type: none"> ▶ Clean the bean container (see Chapter 5 ‘Maintenance – Cleaning the bean container’).
Preparation stops, ‘Fill bean container’ is briefly displayed although the bean container has been filled.	The sliding catch for the bean container has not been pulled out or has not been pulled out completely.	<ul style="list-style-type: none"> ▶ Open the service cover on the back of the machine and pull the sliding catch all the way out (see Chapter 5 ‘Maintenance – Cleaning the bean container’).
‘Fill water tank’ is not displayed although the water tank is empty.	There is a lot of limescale in the water tank.	<ul style="list-style-type: none"> ▶ Descale the water tank (see Chapter 5 ‘Maintenance – Descaling the water tank’).
‘Empty drip tray’ is always displayed.	The metal contacts of the drip tray are dirty or wet.	<ul style="list-style-type: none"> ▶ Clean and dry the metal contacts on the back of the drip tray.

Problem	Cause/Result	Action
'Error 2' or 'Error 5' is displayed.	If the machine has been exposed to the cold for a long period of time, heating may be disabled for safety reasons.	► Warm the machine at room temperature.
Other 'Error' messages are displayed.	–	► Switch the GIGA off with the On/Off button  . Contact customer support in your country (see Chapter 11 'JURA contact details / Legal information').


- i** If you were unable to solve the problem, contact customer support in your country (see Chapter 11 'JURA contact details / Legal information').

8 Transport and environmentally friendly disposal

Transport / Emptying the system

Keep the packaging for your GIGA. It should be used to protect the machine during transport.

In order to protect the GIGA from frost during transport, the system must be emptied.

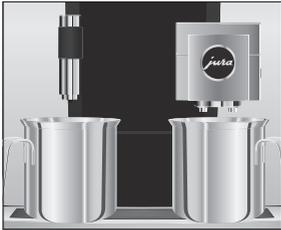

Precondition: The start screen is displayed.

- ▶ Remove the milk pipe from the dual spout.
- ▶ Place one receptacle under the dual spout and another under the hot-water spout.
- ▶ Touch 'P'.

'Maintenance status'

- ▶ Turn the Rotary Switch until 'Machine settings' is displayed.
- ▶ Press the Rotary Switch.

'Machine settings'

- ▶ Move your finger across the display until 'Empty system' is displayed in the center.

- ▶ Touch 'Empty system'.

'Empty system' / 'Remove the water tank'

- ▶ Remove and empty the water tank.

'Press the Rotary Switch'

- ▶ Press the Rotary Switch.

Water and steam will continue to be discharged from the dual spout and the hot-water spout until the system is empty.

Your GIGA is switched off.

Disposal

Please dispose of old machines in an environmentally neutral way.



9 Technical data

Voltage	120 V ~, 60 Hz
Power	1500 W
Airborne noise emitted	$L_p \leq 70$ dB (A)
Ambient conditions	Humidity max. 80% Ambient temperature 10 – 35 °C
Conformity mark	
Energy consumption 'Save energy' / '1'	approx. 9 Wh
Energy consumption 'Save energy' / '0'	approx. 25 Wh
Pump pressure	static, max. 15 bar
Holding capacity of water tank	176 oz (5 l)
Holding capacity of bean container	2× 23 oz (2× 650 g)
Holding capacity of coffee grounds container	max. 40 portions
Cord length	approx. 47 in. (1.2 m)
Weight	approx. 42 lb (19.0 kg)
Dimensions (W × H × D)	14.6 × 22.2 × 19.6 in. (37 × 56.5 × 49.7 cm)
CLEARYL Pro Smart filter cartridge (RFID technology)	Frequency band 13.56 MHz Max. transmission power < 1 mW
JURA Smart Connect (wireless connection)	Frequency band 2.4 GHz Max. transmission power < 1 mW

Directives The machine complies with the following directives:

- Standard UL 1082
- Canadian Standard CSA C22.2 No. 64

FCC Rules This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules.

10 Index

A

- Addresses 58
- Adjusting the product settings 27
- Aroma preservation cover
 - Bean container with aroma preservation cover 8
- Automatic switch-off 28
 - Timer 29
- Automatic switch-on
 - Timer 29

B

- Bean container
 - Bean container with aroma preservation cover 8
 - Cleaning 44
 - Filling 11
- Beans à la carte
 - Activating the grinder selection 20
- Black tea 21
- Bus bar
 - Technical data 51
- Button
 - On/Off button 9
- Bypass amount of water 18

C

- Caffè Barista 18
- Caffè latte 18
- Cappuccino 18
- Cappuccino frother cleaning
 - Cleaning the milk system 37
- Cleaning
 - Bean container 44
 - Machine 41
- CLEARYL Pro Smart filter cartridge
 - Changing 40
 - Inserting 40
- Coffee 17
 - Two coffees 17
- Coffee grounds container 8
- Consistency of grind
 - Setting the consistency of grind 27
- Contact details 58
- Cortado 17

Cover

- Service cover 9
 - Storage compartment 8
 - Water tank 8
- Cup platform 8
- Customer support 58

D

- Daily maintenance 23
- Date 29
- Descaling
 - Machine 42
 - Water tank 45
- Disable
 - Message display 32
 - One-off settings 32
 - Product selector view 32
 - Product settings 32
- Display
 - Touchscreen display 9, 10
- Display brightness 34
- Display messages 46
- Disposal 50
- Double product 17
- Drip tray 8
 - Insert 8
- Dual spout
 - Dismantling and cleaning 38
 - Height-adjustable dual spout 8

E

- Emptying the system 50
- Energy-saving mode 32
- Errors
 - Troubleshooting 48
- Espresso 17
 - Two espressi 17
- Espresso macchiato 18

F

- Factory settings
 - Restore factory settings 34
- Filler funnel
 - Filler funnel for ground coffee 8
- Filling
 - Bean container 11
 - Water tank 22

- Filter
 - Changing 40
 - Inserting 40
- First-time use 12
- Flat white 18
- G**
 - Green tea 21
 - Grinder
 - Activating the grinder selection 20
 - Setting the consistency of grind 27
 - Ground coffee 19
 - Measuring spoon for ground coffee 8
- H**
 - Homepage 10
 - Hotline 58
 - Hot water 21
 - Hot-water spout
 - Height-adjustable hot-water spout 8
- I**
 - Important safeguards
 - Safety 4
 - Insert for drip tray 8
 - Instant coffee
 - Ground coffee 19
 - Internet 10
- J**
 - JURA
 - Contact details 58
 - Internet 10
- L**
 - Language 33
 - Latte macchiato 18
 - Locking device 9
- M**
 - Machine
 - Cleaning 41
 - Daily maintenance 23
 - Descaling 42
 - Regular maintenance 23
 - Rinsing 36
 - Setting up 11
 - Switching off 24
 - Switching on 22
 - Maintenance 36
 - Daily maintenance 23
 - Regular maintenance 23
 - Measuring spoon for ground coffee 8
 - Messages, display 46
 - Milk
 - Connecting milk 14
 - Milk system
 - Cleaning 37
 - Milk system rinsing 37
- P**
 - Permanent settings in programming
 - mode 25
 - Pot of coffee 17
 - Power cord 8
 - Power switch 8
 - Preparation 15, 18
 - At the touch of a button 16
 - Black tea 21
 - Caffè latte 18
 - Cappuccino 18
 - Coffee 17
 - Cortado 17
 - Espresso 17
 - Espresso macchiato 18
 - Flat white 18
 - Green tea 21
 - Ground coffee 19
 - Hot water 21
 - Latte macchiato 18
 - Lungo Barista 18
 - Pot of coffee 17
 - Two coffees 17
 - Two espressi 17
 - Two ristretti 17
 - Two specialty coffees 17
 - Using the product selector 16
 - Preparation options 16
 - Problems
 - Troubleshooting 48
 - Product selector view 16
 - Product settings 26
 - Adjusting 27
 - Programming mode 25
 - Automatic switch-off 28
 - Disabling functions 32
 - Display brightness 34

- Energy-saving mode 32
- Language 33
- Product settings 26
- Querying information 35
- Restore factory settings 34
- Setting the consistency of grind 27
- Setting the water hardness 30
- Time and date 29
- Timer 29
- Unit for amount of water / time format 31

Q

- Querying information 35

R

- Regular maintenance 23
- RFID 51
- Rinsing
 - Machine 36
- Rotary Selection 16
- Rotary Switch 9, 10

S

- Safety
 - Important safeguards 4
- Service cover 9
- Service socket 9
- Settings
 - Permanent settings in programming mode 25
- Setting up
 - Setting up the machine 11
- Sliding catch 9
- Smart Connect 9
- Spout
 - Height-adjustable dual spout 8
 - Height-adjustable hot-water spout 8
- Switching off 24
 - Timer 29
- Switching on 22
 - Timer 29
- Switch-off
 - Automatic switch-off 28
- Switch-off time 29
- Switch-on time 29
- Symbol description 3

T

- Technical data 51
- Tel 58
- Time 29
- Time format
 - Programming mode 31
- Timer 29
- Touchscreen display 9, 10
- Transport 50
- Troubleshooting 48
- Two products 17

U

- Unit for amount of water
 - Programming mode 31
- Use, First-time 12

V

- Ventilation slats 8
- Venti Ports
 - Ventilation slats 8

W

- Water hardness
 - Determining the water hardness 11
 - Setting the water hardness 30
- Water tank 8
 - Descaling 45
 - Filling 22
- Website 10
- Wireless connection 51

11 JURA contact details / Legal information

JURA Elektroapparate AG
Kaffeeweltstrasse 10
CH-4626 Niederbuchsiten
Switzerland

	USA: JURA Inc.	Canada: FAEMA
Customer Service		
Phone	1-800-220-5701	1-(855)-544-8600
E-Mail	info@us.jura.com	info@juracanada.ca
Opening Hours (EST)	Mon – Thu 9 am – 9 pm, Fri 9 am – 8 pm, Sat 9 am – 5 pm	
Distributor Address	20 Craig Road Montvale, NJ 07645	115 Matheson Boulevard East Mississauga, Ontario, L4Z 1X8
Phone	001 (201) 767-3999	1-(905)-501-8600
Fax	001 (201) 767-9684	
Internet	www.us.jura.com	www.ca.jura.com

@ You will find additional contact details for your country at **jura.com**.

Technical changes We reserve the right to make technical changes. The diagrams used in these instructions for use are for illustration purposes only and do not represent the original colors of the machine. Some details of your GIGA may vary.

Feedback Your opinion is important to us! Use the contact details at jura.com.

Copyright The instructions for use contain information which is protected by copyright. It is not permitted to photocopy these instructions for use or translate them into another language without the prior written consent of JURA Elektroapparate AG.